

OPERATING INSTRUCTIONS F58S40 REV. 1

Hall Effect Zero Speed Sensor F58S40

GREEN LINE

INDUSTRIAL SPEED SENSORS

Product ID

	Type #	Product #	Drawing #		
	F58S40	385Z-05563	113.626 Rev.2		
General					
Function	The F58S40 series Hall effect speed sensors are suitable, in conjunction with a ferrous pole wheel, for generating square wave signals proportional to rotary speeds. They exhibit a static function, whereby pulse generation down to 0 Hz is guaranteed. The sensor function is independent of rotational mounting angle.				
Technical data					
Supply voltage	825 VDC				
Current consumption	Max. 12 mA (without	ut load)			
Signal output		d to supply (negative pole = x. 25 mA voltage	with internal 2.7 kOhm pull-up reference Voltage).		
Frequency range	0 Hz15 kHz				
Housing	5/8"-18 UNF-2A, tig	htening torque: max. 35 Nm	I		
Connection	Cable with open leads: 3-wire, 3 x 0.34 mm2 (AWG22), stranded wires, elastomer isolation, green casing, fire retardant, low smoke, RoHS conform and halogen free, max. outer Ø = 4.8 mm, min. bending radius = 25 mm (static) and 50 mm (dynamic), cable length according to dimensional drawing				
Protection	Sensor head: IP68 Cable outlet: IP67				
Insulation	Housing and electro	onics galvanically isolated (T	est: 500 V, 50 Hz for 1 minute)		
Pole wheel	Prerequisite: Tooth Optimal performand Involute gear Tooth width > 10 Side offset < 0.2 Eccentricity < 0.1) mm mm	al (e.g. Steel 1.0036).		
Air gap between sensor and pole wheel	 Module 1.0 (DP 25.4): 0.30.5 mm Module 2.0 (DP 12.7): 0.31.5 mm 				
Electromagnetic compatibility (EMC)	Please contact Jaq	uet for further details.			
Vibration & shock immunity	Jaquet Greenline sensors are approved for rough environments. Please contact Jaquet for further details.				



IN CHARGE OF SPEED

OPERATING INSTRUCTIONS F58S40 REV. 1

Further In	forma
------------	-------

Further Information			
Safety	All mechanical installations must be carried out by an expert. General safety requirements have to be met.		
Installation	The sensor has to be aligned to the pole wheel according to the sensor drawing independent of its rotational orientation. Deviations in positioning may affect the performance and decrease the noise immunity of the sensor. During installation, the smallest possible pole wheel to sensor gap should be set. The gap should however be set to prevent the face of the sensor ever touching the pole wheel. Within the air gap specified the amplitude of the output signal is not influenced by the air gap. A sensor should be mounted with the middle of the face side over the middle of the pole wheel. Dependent upon the wheel width, a certain degree of axial movement is permissible. However, the middle of the sensor must be at minimum in a distance of 3 mm from the edge of the pole wheel under all operating conditions. A solid and vibration free mounting of the sensor is important. Eventual sensor vibration relative to the pole wheel can induce additional output pulses. The sensors are insensitive to oil, grease etc. and can be installed in arduous conditions.		
Maintenance	Product cannot be repaired.		
Transport	Product must be handled with care to prevent damage of the front face.		
Storage	Product must be stored in dry conditions. The storage temperature corresponds to the operation temperature.		
Disposal	Product must be disposed of properly, it must not be disposed as domestic waste.		



OPERATING INSTRUCTIONS F58S40 REV. 1

	VZ 180NF ZV 22 he	- Cost		min. 1000	silicone (AWG2	23 ±2 23 ±2 2 cable 0.34m	2	
			part no. Jaquet 385Z-05332 F58S 385Z-05562 F58S25 385Z-05563 F58S40	<u>brown</u> +V	I (.J.)			
part -	no. 	dime mater _/_	R TECHNICAL SPECIFICATIONS	up;	NSTRUCTIO!	NS		
-	-	-/-		all	allowed tolerance			
	-	_/_	-		llacement for			
-	-	_/_	-		tangle jection drawn	27.09.2006	еbi	
2	6280	10.04.07/e] \	21.07.2000		
rev.	ecn.	date/signati				27.08.07	the	
-	HNOLO Thannerst (H-4009 www.jaqu) Basel	speed sensor Greenline F		nat drawing n	13.626	rev. 2	